

Installation Manual



1. Insert cable into nut



2. strip off 1.2 inch(30mm) of cable jacket, fold back braid and drain wire.



3. paste copper foil on the braid and ground wire and cut off the excess weave and ground wire




4. Fan out all four twisted pairs, following the color coding label and allocate each

	T568A				T568B				PROFINET			
←	6	3	2	1	6	3	2	1	6	3	2	1
↺	8	7	4	5	8	7	4	5				

5. Across the holder, according the color marks of T568A or T568B or PROFINET



6. following the color coding label and allocate each conductor into proper slots on wiring cap. Trim the ends of conductors.

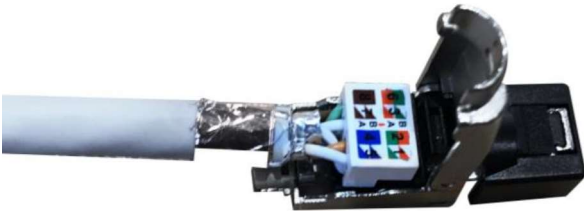

7. Place wiring cap on plug



8. Close plug cover, make sure the drain wire is in proper contact with grounding clip on plug.




9. Screw the nut tight



10. Use angled accessories,



11. Can achieve 90 degree bends in 4 different directions

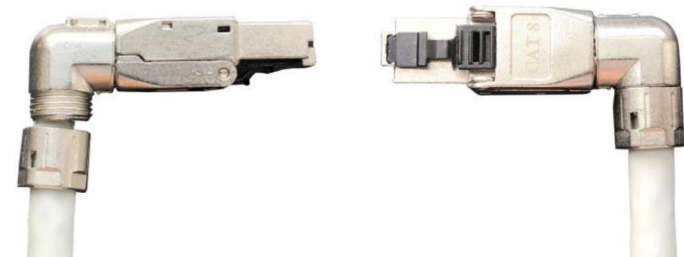

12. Screw the nut tight